


Вносител: "Биттел" ЕООД
 гр. Пловдив, Тракия
 ул. "Нестор Абаджиев" 13
 БУЛСТАТ: 115163890
 Тел: +359 32 27 00 27
 www.bittel.bg

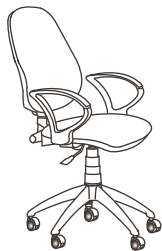


Importer: BITTEL LTD
 Plovdiv, Trakia Ind. zone,
 13 Nestor Badjiev str.
 ID:115163890
 Tel: +359 32 27 00 27
 www.bittel.bg

Assembling parts / Елементи :

- | | |
|-----------------------|-----------------------|
| A - Castors | A - Колелца |
| B - Base | B - База |
| C - Gas lift | C - Газов амортисьор |
| D - Rim | D - Шайба |
| E - Gas lift cover | E - ПВХ маншон |
| F - Permanent contact | F - Перманент контакт |
| G - Plastic cover | G - ПВХ елемент |
| H - Seat | H - Седалка |
| I - Back | I - Облегалка |
| J - Armrest | J - Подлакътник |
| K - Plate | K - Планка |
| L - Screw M6x16 | L - Винт M6x16 |
| M - Screw M6x12 | M - Винт M6x12 |
| N - Screw M6x40 | N - Винт M6x12 |
| O - Main screw M8x35 | O - Главен винт M8x35 |
| P - Main screw M8x18 | P - Главен винт M8x18 |

**Characteristics
Свойства на модела**

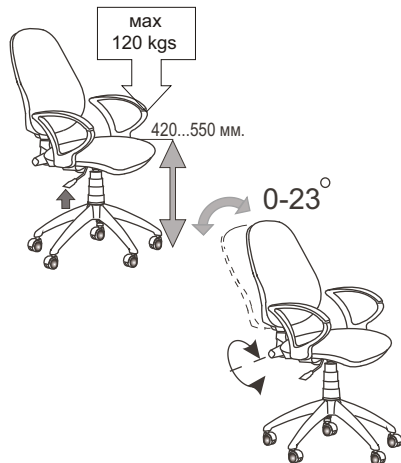

**ASSEMBLING INSTRUCTION : GOLF
ИНСТРУКЦИЯ ЗА МОНТАЖ : GOLF**

1 Attaching castors (A) to the base (B).

2 Attaching the gas lift cover (E) to the gas lift (C) using a rim (D).

3 Attaching the gas lift assembly (C, E, D) to the base (B).

4 Attaching the seat (H) to the base (J, K) using screws (L, M, N) and the main screw (O). A screwdriver is used for screw N.

5 Attaching the backrest (I) to the seat (H) using the permanent contact (F) and plastic cover (G). The gas lift cover (E) is also shown.

6 Final assembly step showing the seat (H) and backrest (I) fully attached to the base (P).

7 Ready model / Готово изделие: A person is shown sitting on the fully assembled chair.

**Assembling parts / pcs./
Елементи / бр. /**

A	B	C	D	E	F	G		
5 бр.	1 бр.	1 бр.	1 бр.	1 бр.	1 бр.	1 бр.		
H	I	J	K	L	M	N	O	P
1 бр.	1 бр.	1 компл	2 бр.	4 бр.	4 бр.	2 бр.	1 бр.	1 бр.

AMF-4
 аѐу Аѐуѐ ђи 50/AMF-4
 AMF-5
 аѐу Аѐуѐ ђи 50/AMF-5