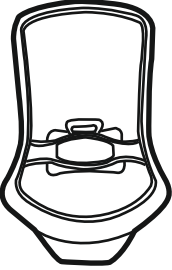



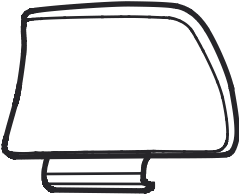

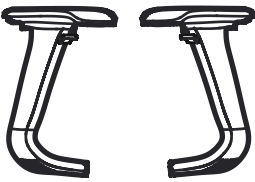

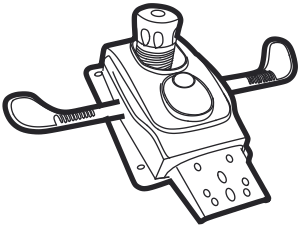







# Инструкция за монтаж на офис стол CARMEN 7581

 <p><b>A</b> x 1</p>	 <p><b>G</b> x 5</p>	 <p><b>105</b> x 6</p>
 <p><b>B</b> x 1</p>	 <p><b>H</b> x 1</p>	<p>φ16*φ8*1</p>  <p><b>106</b> 1</p> <p>M5</p>
 <p><b>C</b> x 1</p>	 <p><b>101</b> 6</p>	
 <p><b>D</b> x 1</p>	 <p><b>102</b> x 4</p>	
 <p><b>E</b> x 1</p>	 <p><b>103</b> x 3</p>	
 <p><b>F</b> x 1</p>	 <p><b>104</b> x 2</p>	
	<p>M6*45</p>	
	<p>M6*35</p>	
	<p>M8*20</p>	
	<p>M6*20</p>	

